

akkon

Bed Assembly Instructions

English version

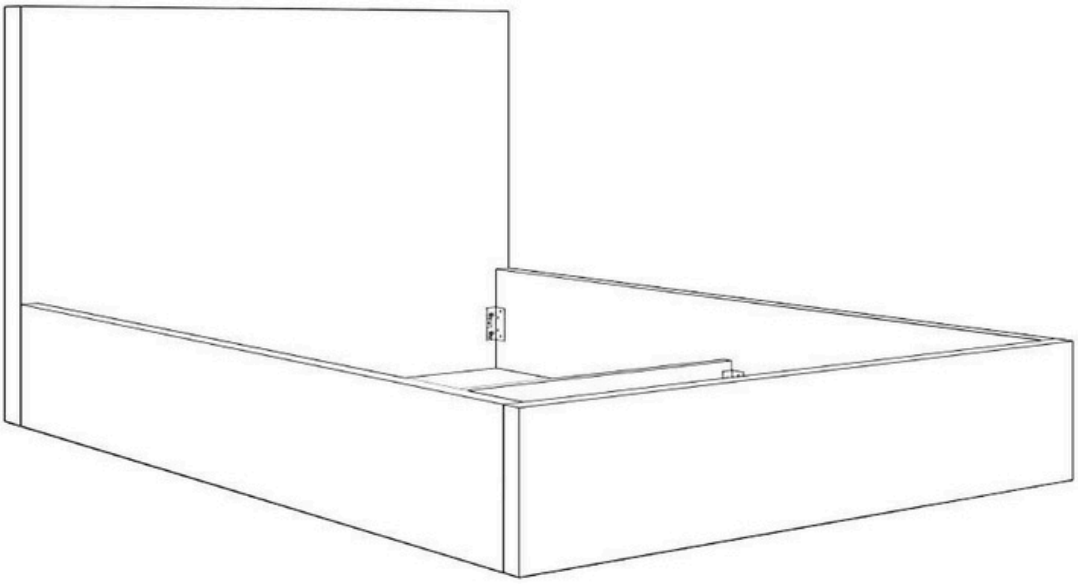


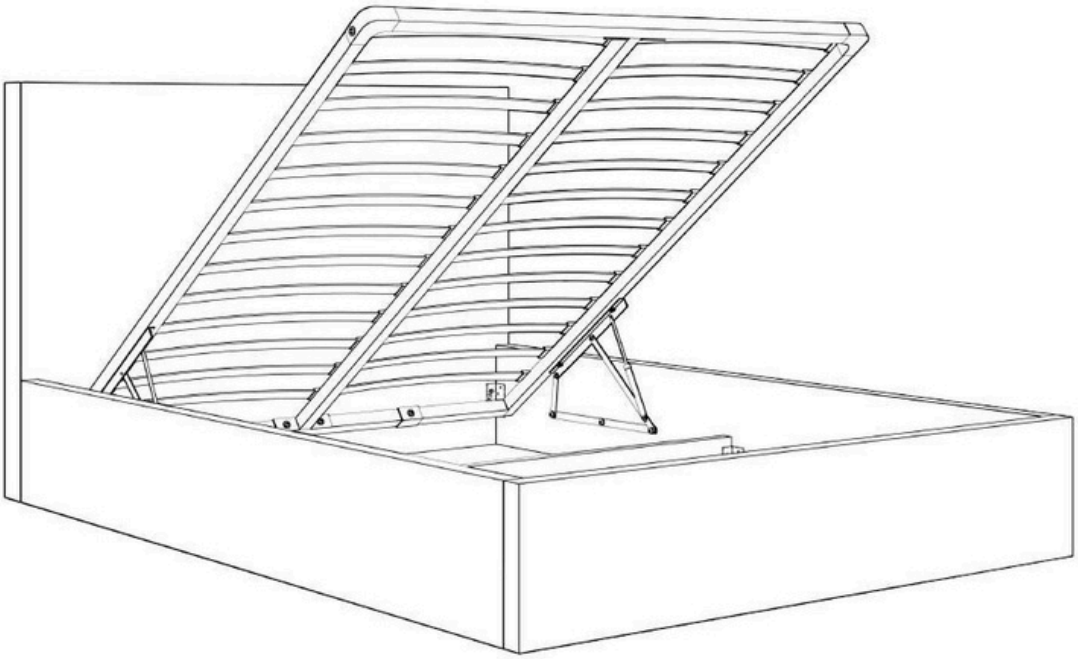


Parts for Assembling the Bed Frame

No.	Parts	Qty
1	Frame-joining screw	12
2	Headboard	1
3	Left side panel	1
4	Right side panel	1
5	Cross beam	1
6	Container bottom	2
7	Front panel	1
8	Frame	1

1



13'

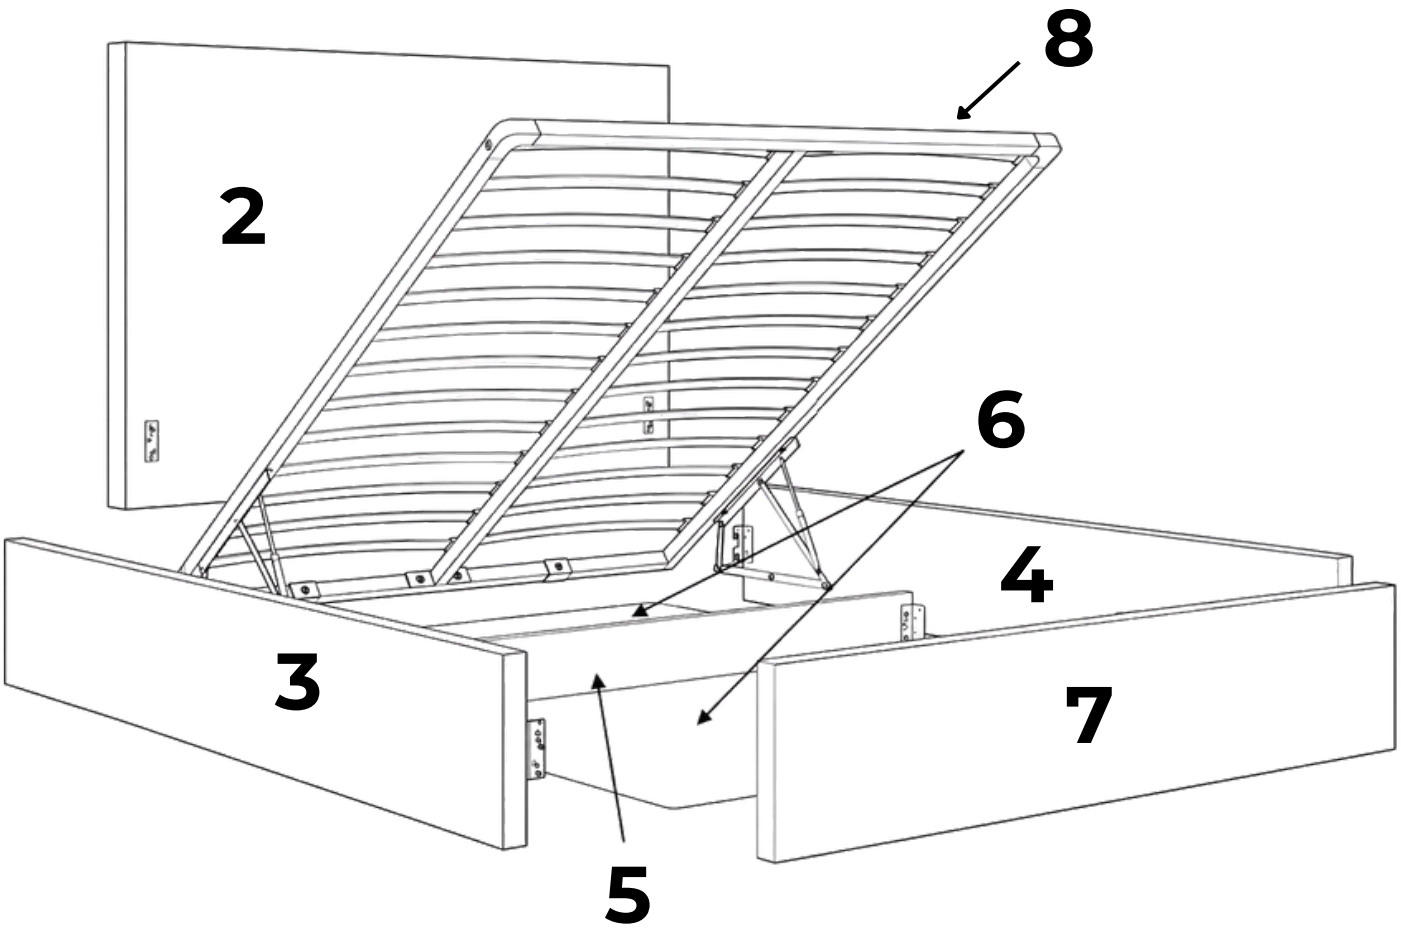

Step 1


Connect the headboard (2) to the left side panel (3) and the right side panel (4) using four screws (1). Use a 13 mm socket wrench or a drill/driver with a 13 mm socket bit to tighten them.


Note: Do not fully tighten the screws — leave a slight gap to allow room for inserting the container bottom (6).

Left side


Right side


1

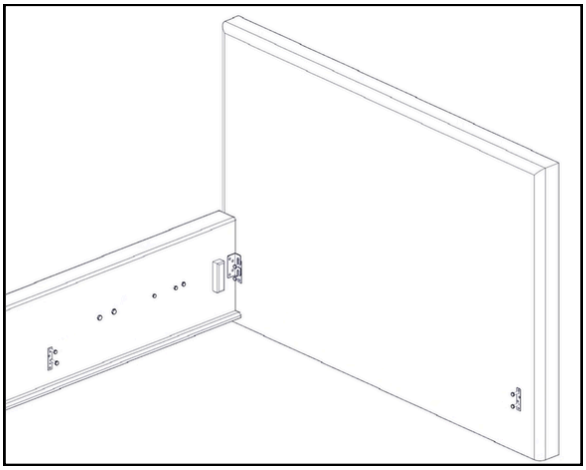

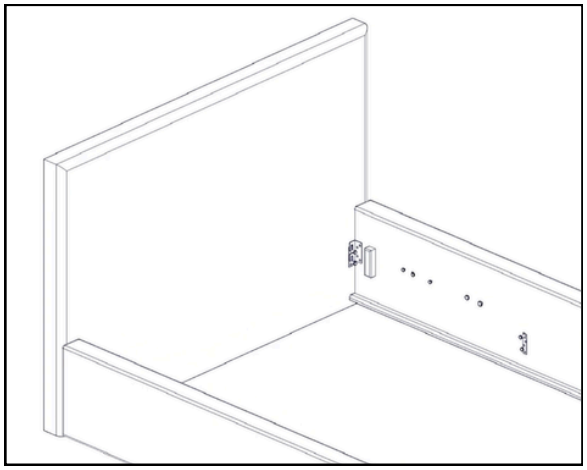



2

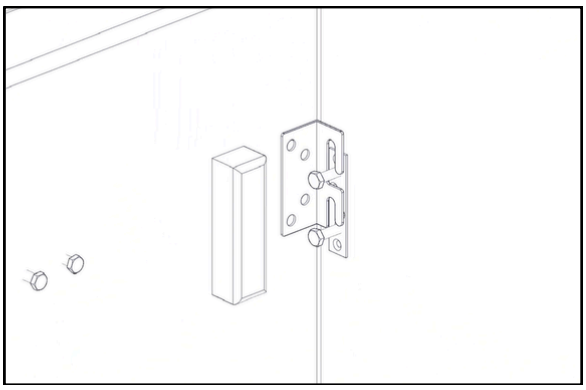

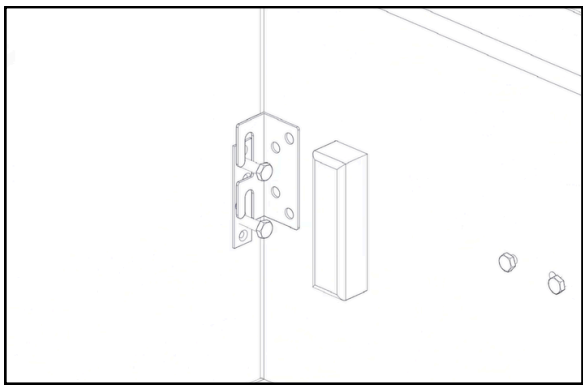


3

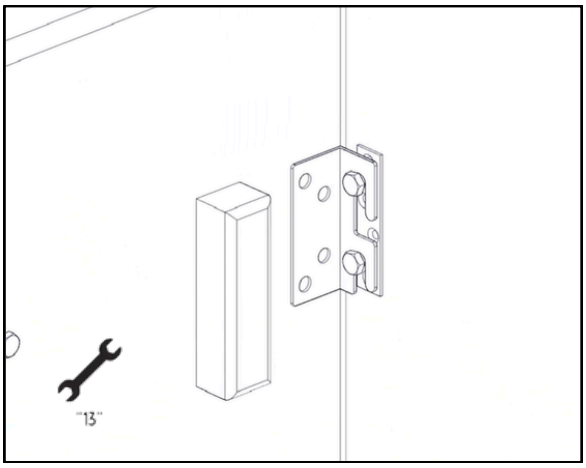


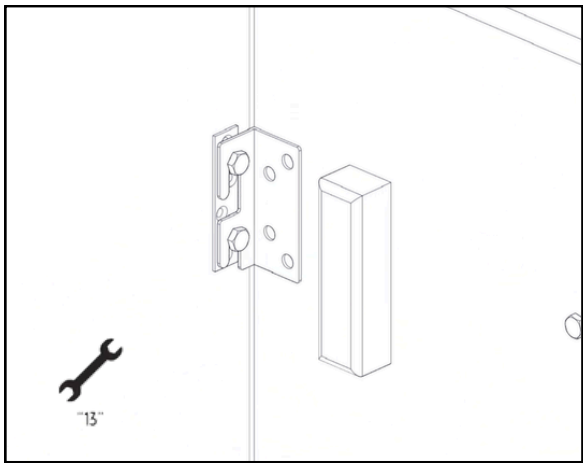

Step 2

Slide the first container bottom (6) between the bed sides and the headboard.

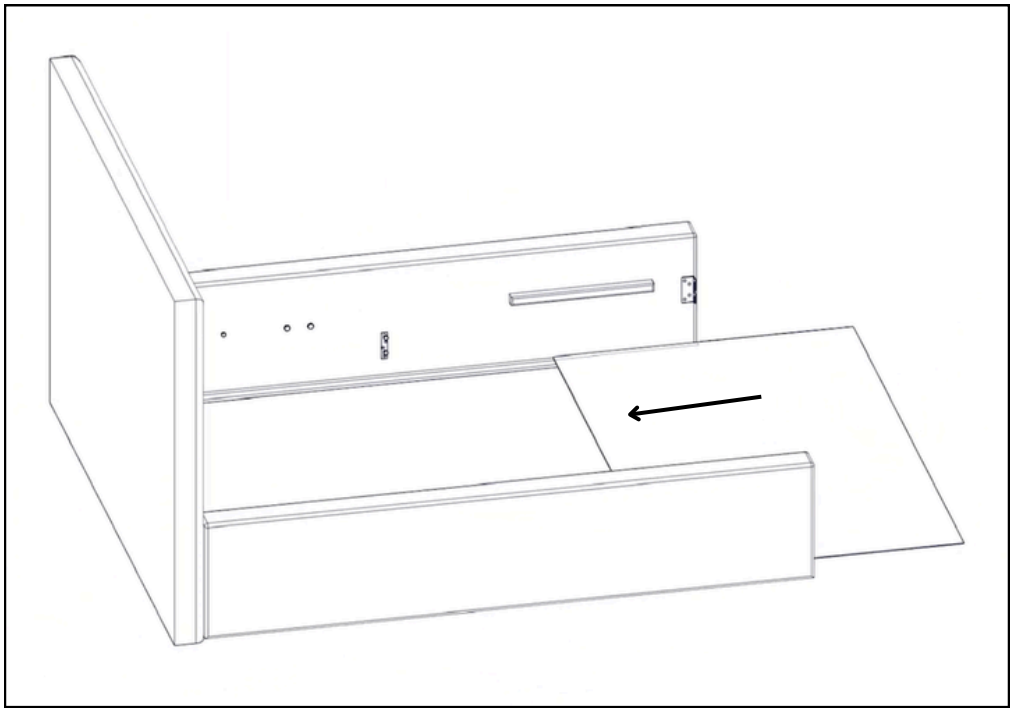


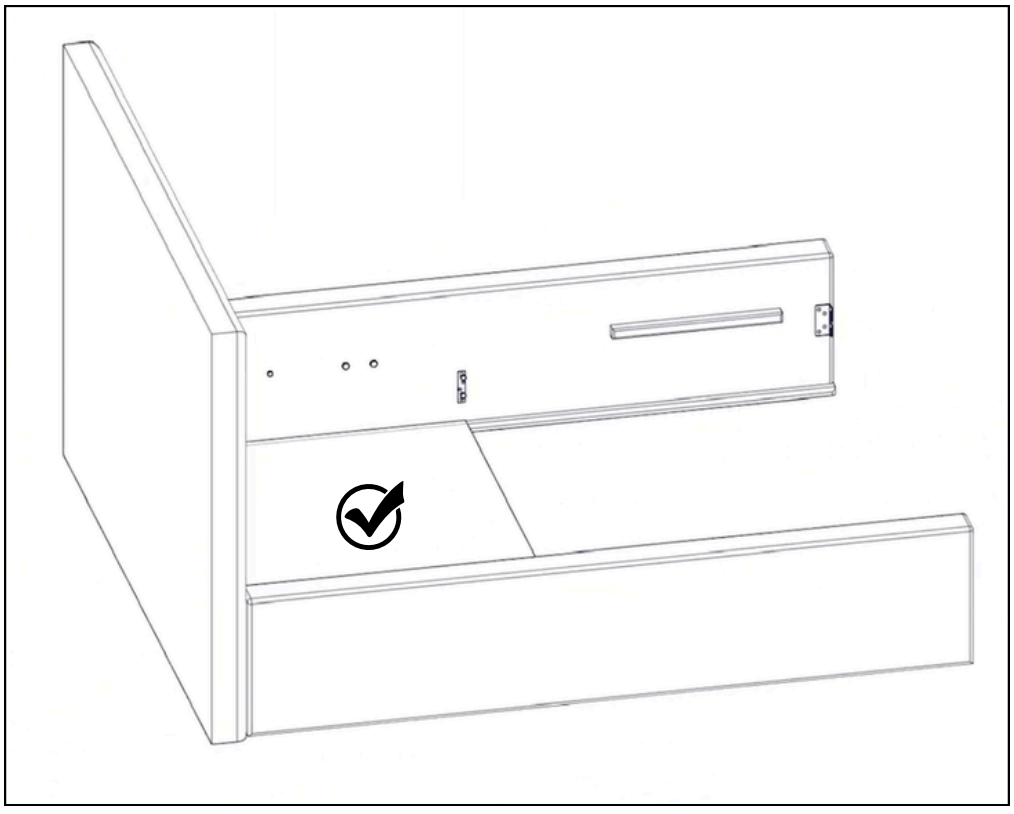


Step 3

Connect the cross beam (5) to the left side panel (3) and the right side panel (4) using four screws (1). Tighten with a 13 mm socket. The mounting brackets for the center rail should face the headboard.


Note: Do not fully tighten the screws — leave a slight gap to allow insertion of the container bottom (6).

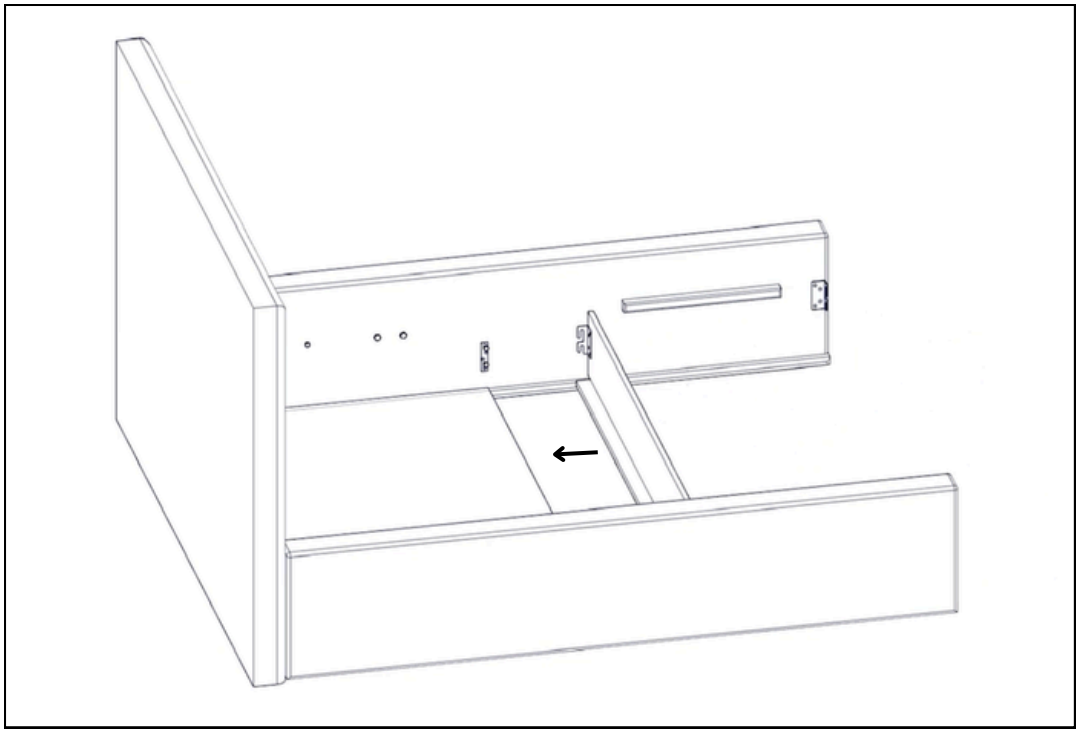


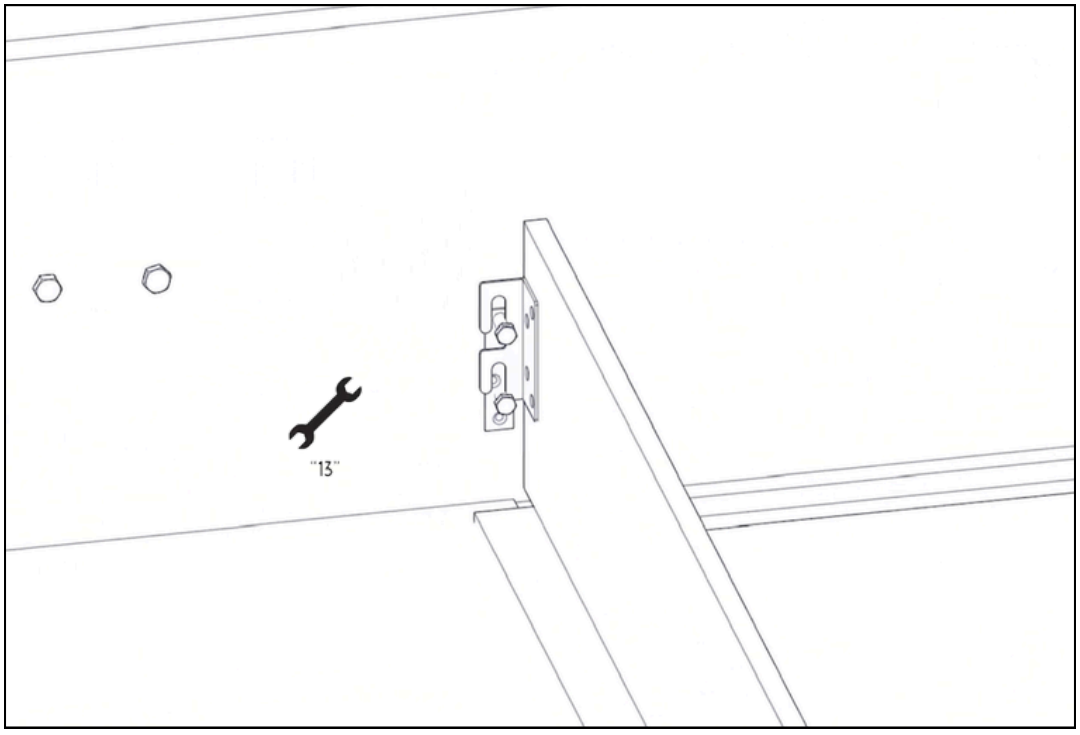

Step 4


Slide the second container bottom between the bed sides and the cross beam.

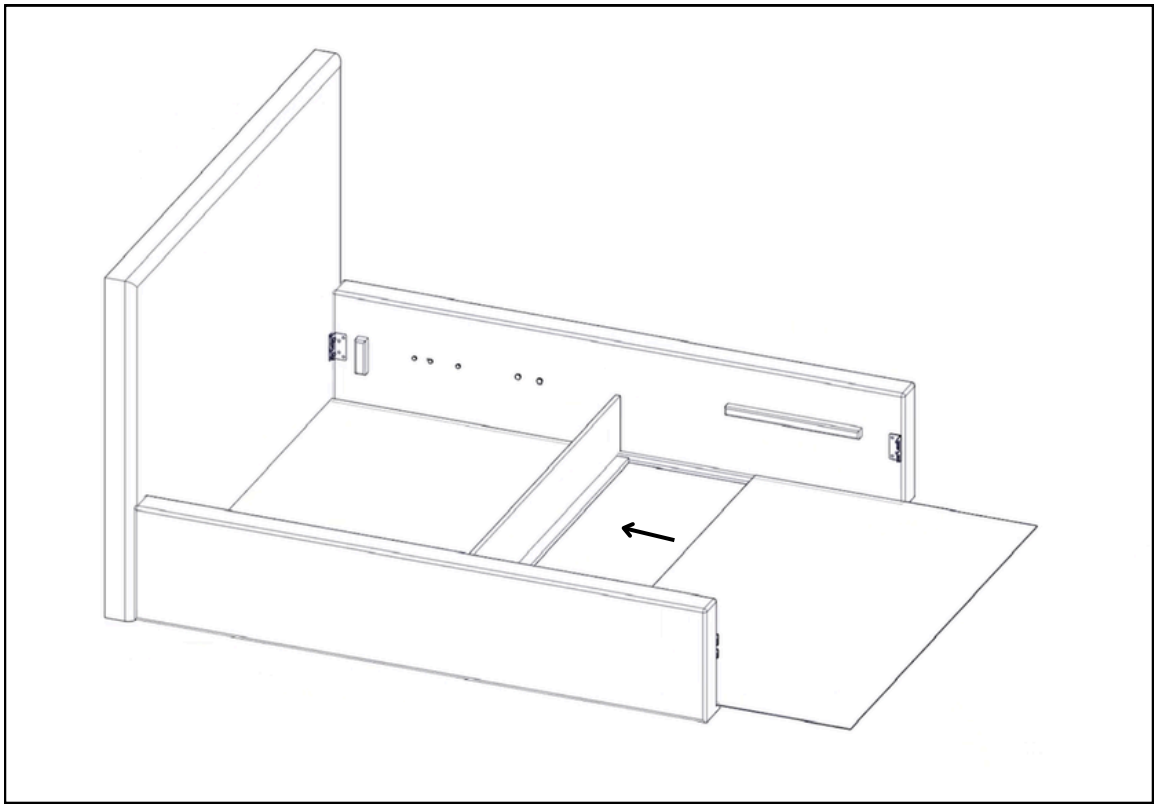


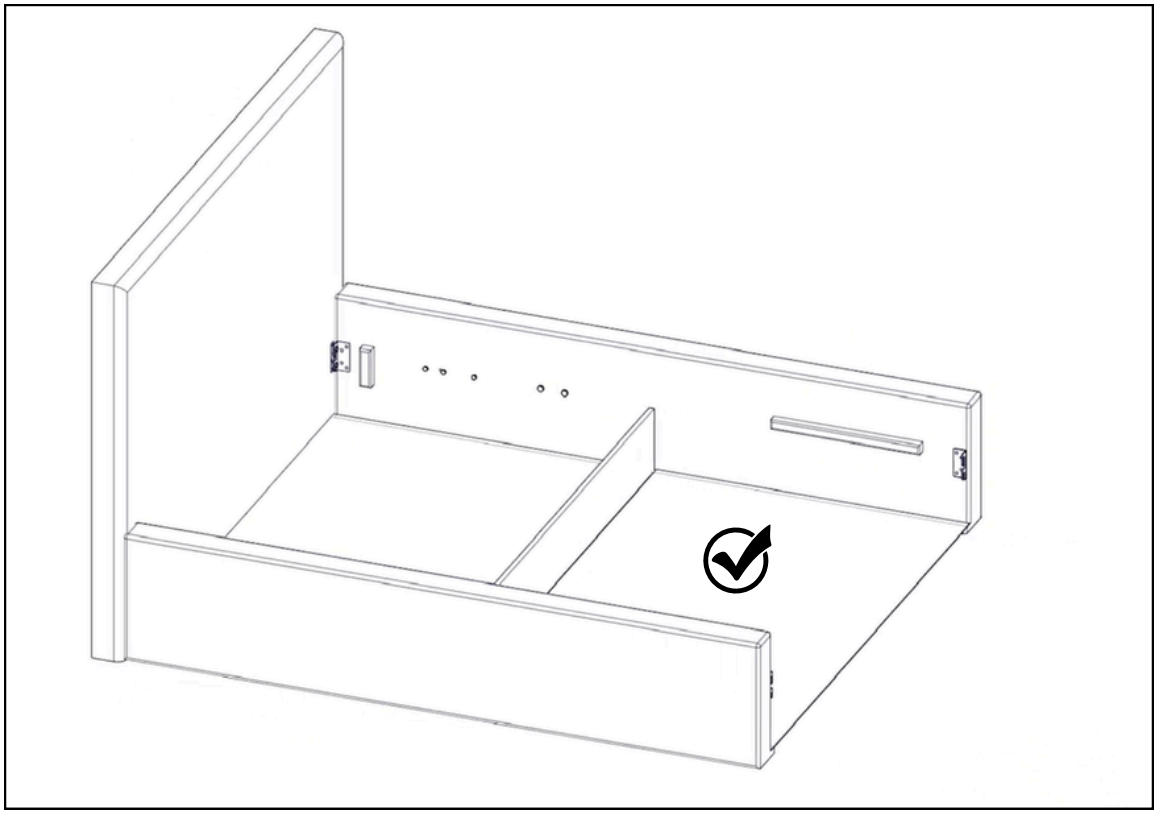


Step 5

Connect the front panel (7) to the left side panel (3) and the right side panel (4) using four screws (1). Use a 13 mm socket wrench or a drill/driver with a 13 mm socket bit to tighten.

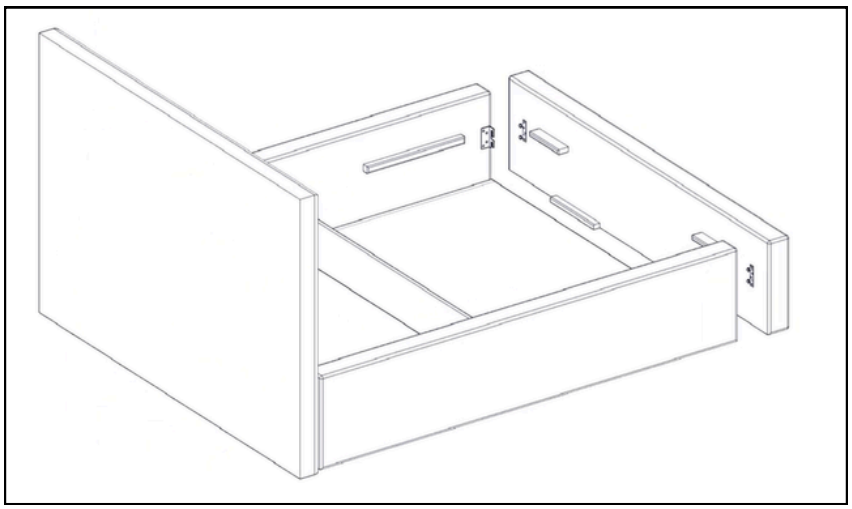


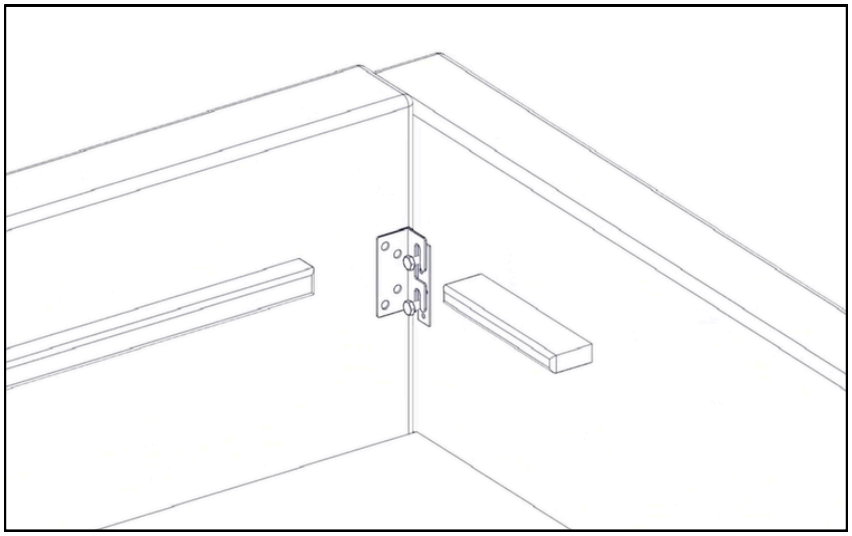

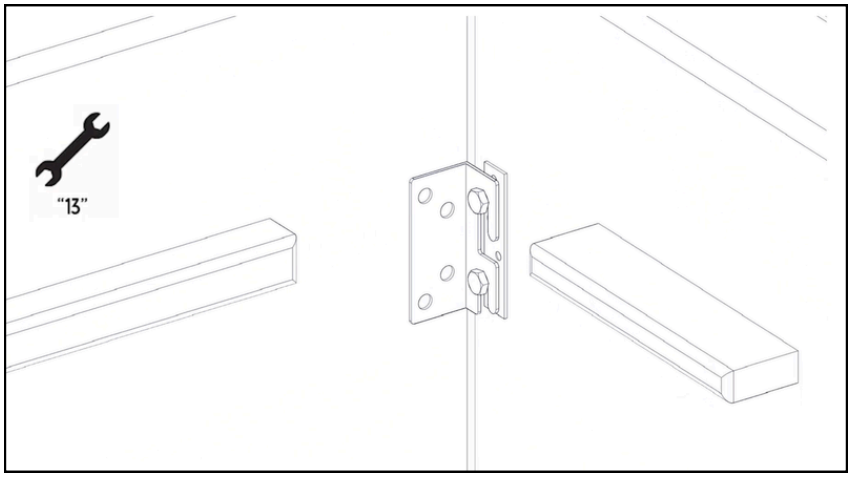



Step 6


Align all the assembled components and fully tighten all 12 screws (1).

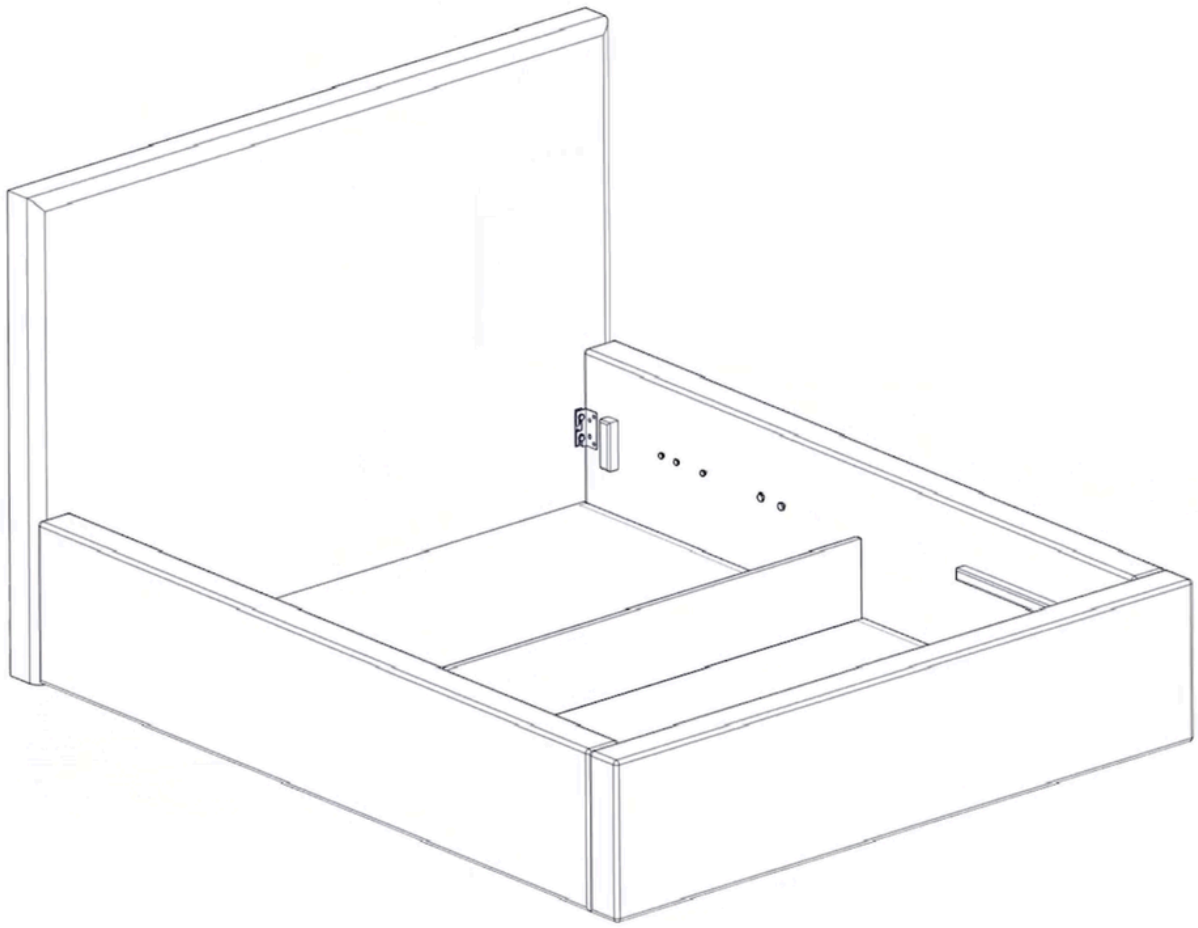


Parts for Assembling the Frame and the Lifting Mechanism

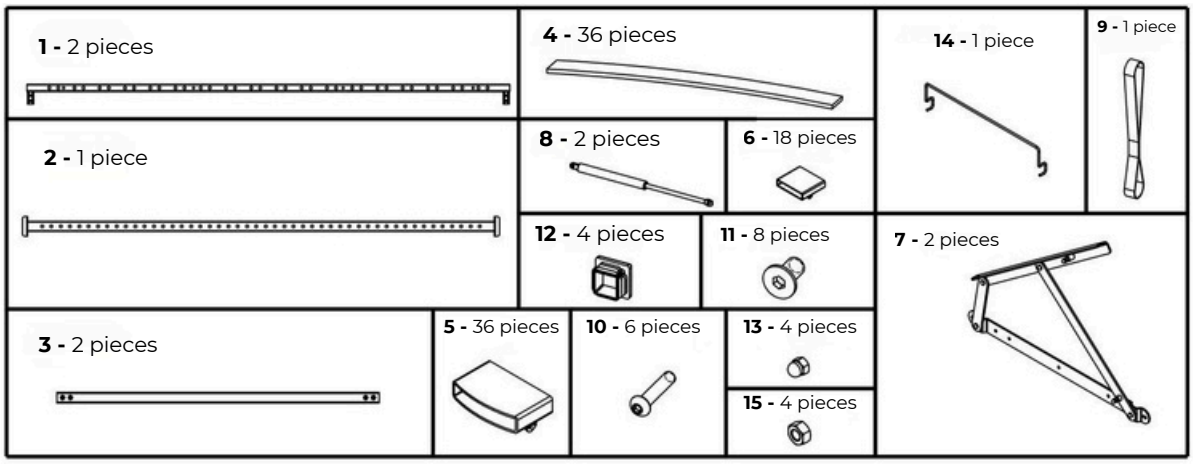

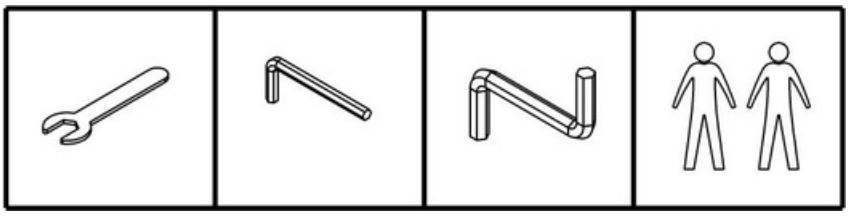

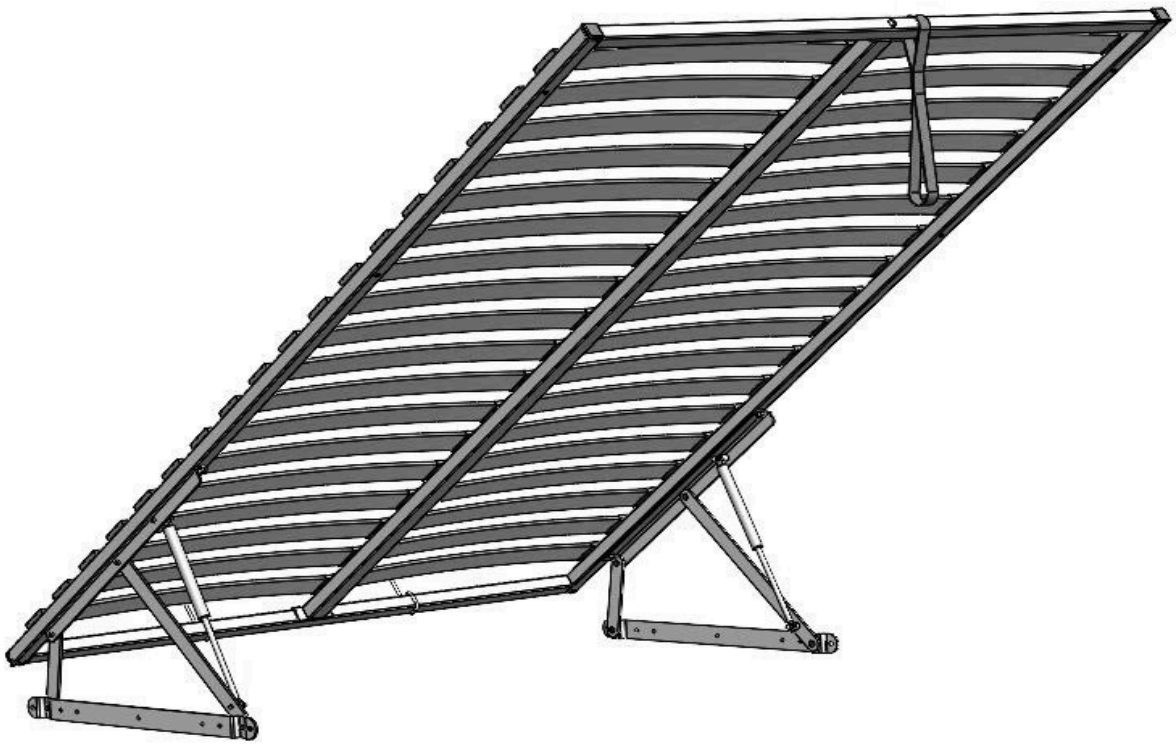


Step 7 – Assemble the centre section of the frame
Place the two crossbars (3) parallel to each other. Position the centre rail (2) between them and connect the parts using the indicated bolts (10). Tighten the connections with the Allen key.

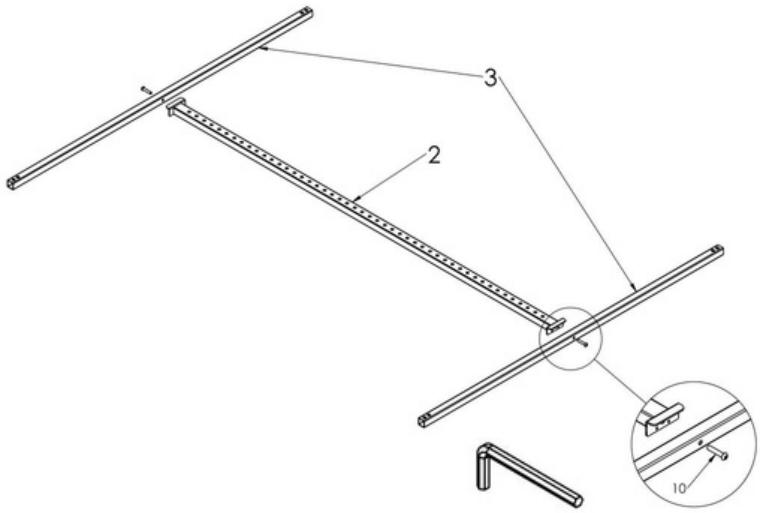


Step 8 – Assemble the outer frame and install the lifting strap
First, attach the lifting strap to the frame in the position shown in the drawing. This must be done before installing the two long side rails.

Then connect the two long side rails (1) to the crossbars using the supplied screws (11) and tighten them with the supplied Allen key.

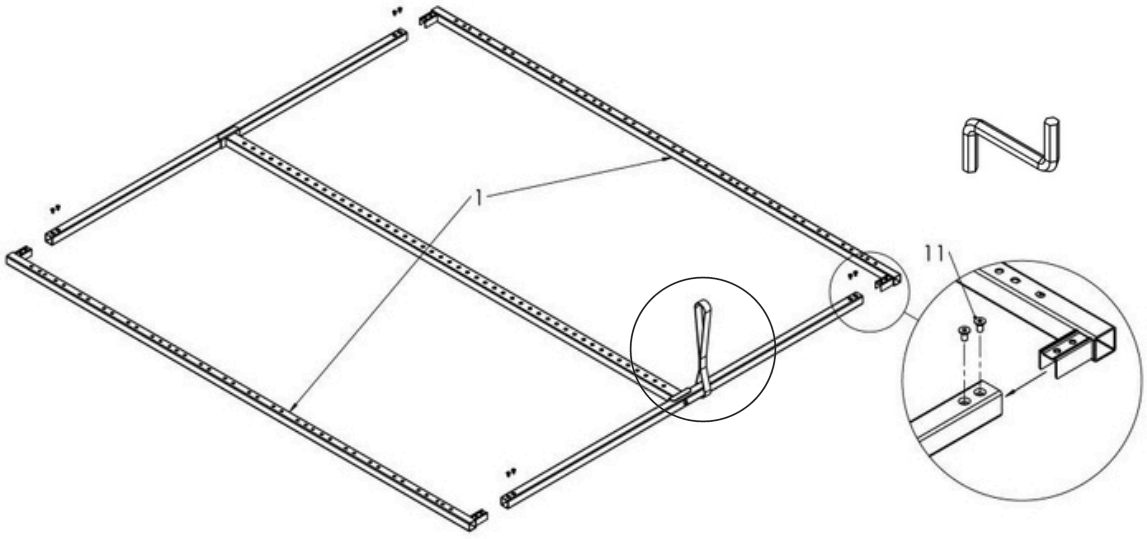


Step 9 – Install the slat holders and slats
Install the slat holders in the holes provided in the frame. Follow the positions shown in illustrations A–G on the image.


Insert the wooden slats (4) into the slat holders (5 and 6). Make sure that every slat is fully inserted and correctly positioned.

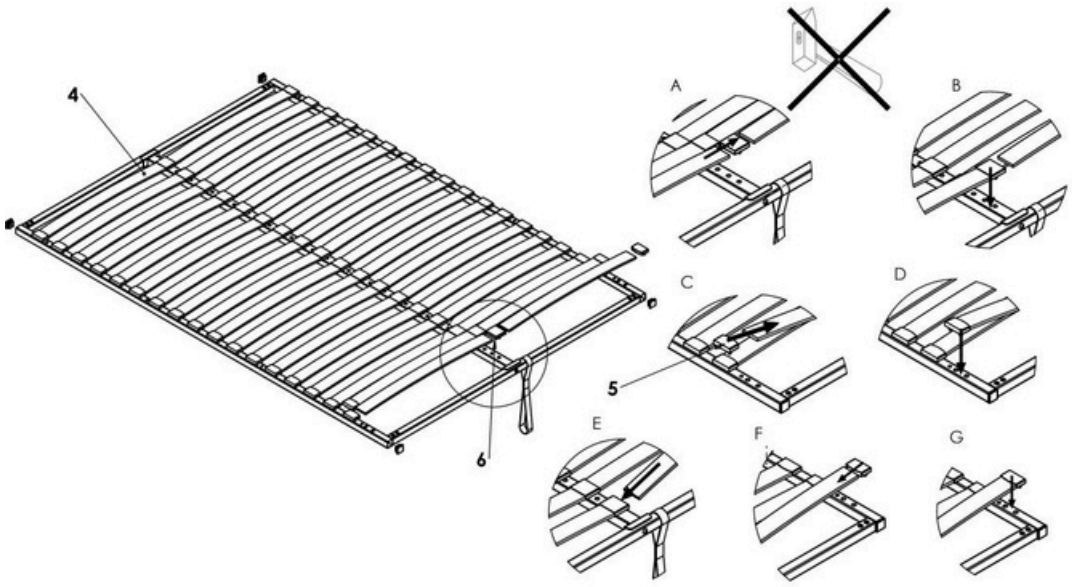

Step 10 – Install the end caps
Push the plastic end caps (12) onto the open ends of the frame.
Check that all four caps are fully inserted and firmly seated.

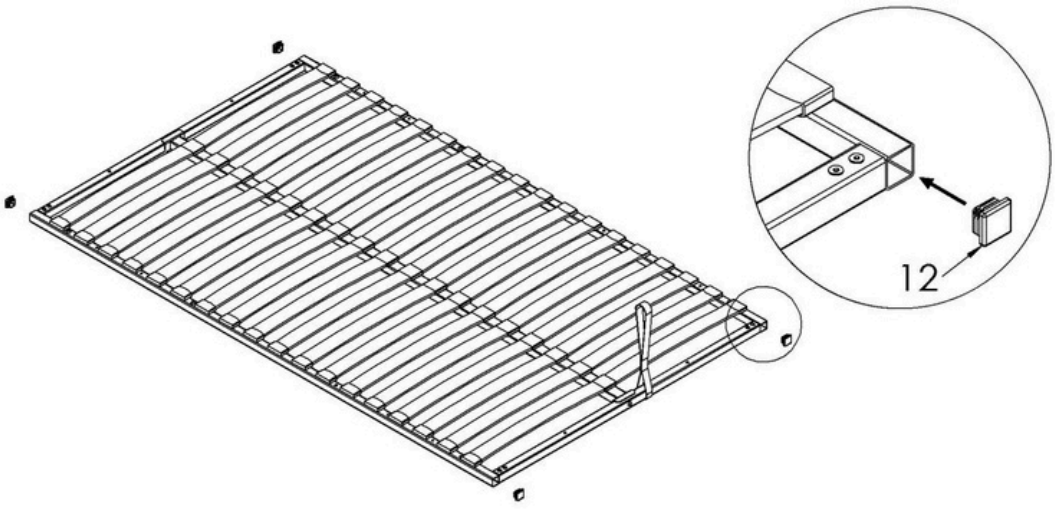


Step 11 – Install the lifting mechanisms
The mounting screws are pre-installed in the side panels at the locations where the lifting mechanisms will be fitted. Remove the five screws from each side, position one lifting mechanism (7) on each side of the bed, and reinstall the screws. Tighten all screws using a 10 mm socket.

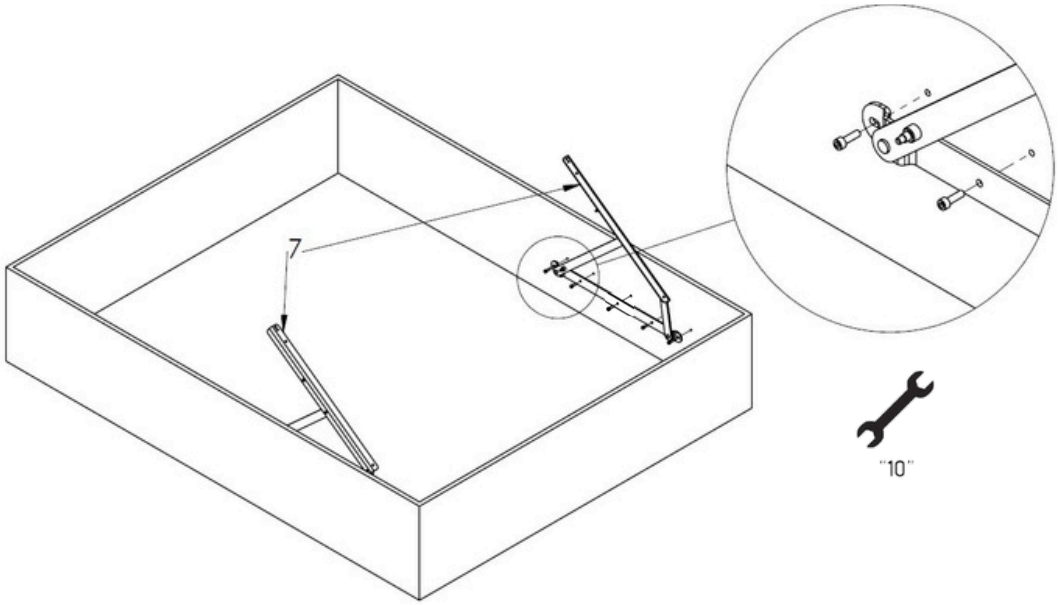

Step 12 – Install the Gas Springs
Attach the gas springs (8) to both lifting mechanisms. Secure only the upper end with nut (13).


Note: **Do not attach the lower end of the gas spring yet.** This will be done in Step 14, after the slatted bed frame has been installed.

Check the image below for the correct installation direction of the gas spring: the thicker end at the top, the thinner end at the bottom.

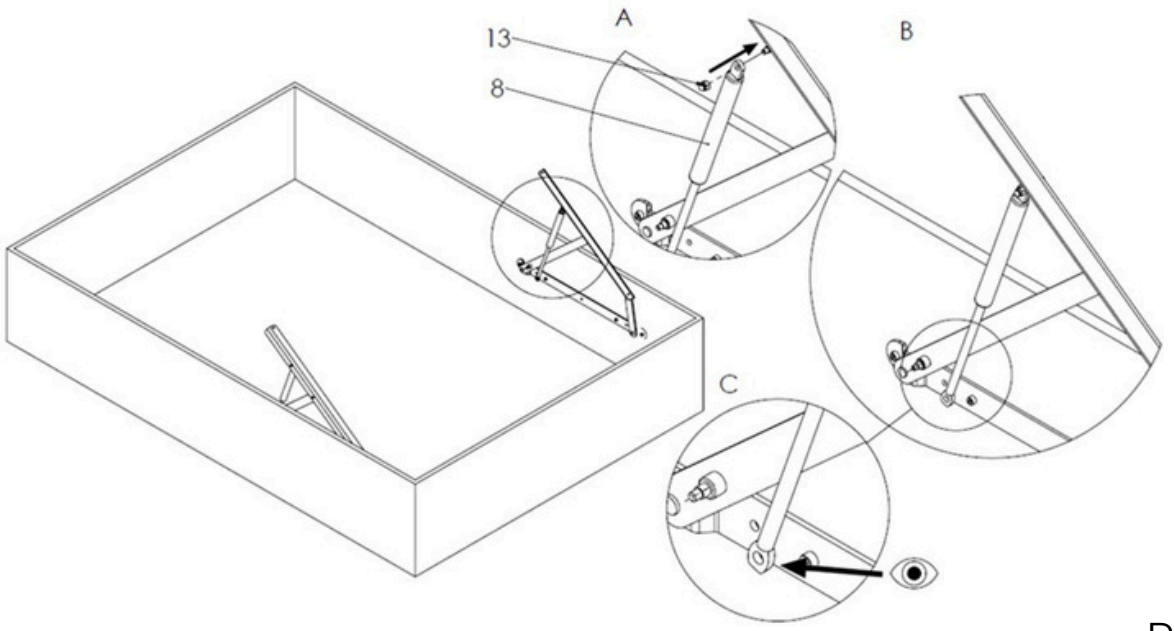


Step 13 – Attach the frame to the lifting arms
Attach the frame to the lifting mechanisms using the supplied Allen screws (10). Insert the screws from the top and secure them from underneath with the supplied nuts (15). Hold the nuts with the supplied wrench while tightening the screws with the Allen key.

Note: Sometimes it is necessary to use force to tighten the screws that connect the frame to the lift-up mechanism.

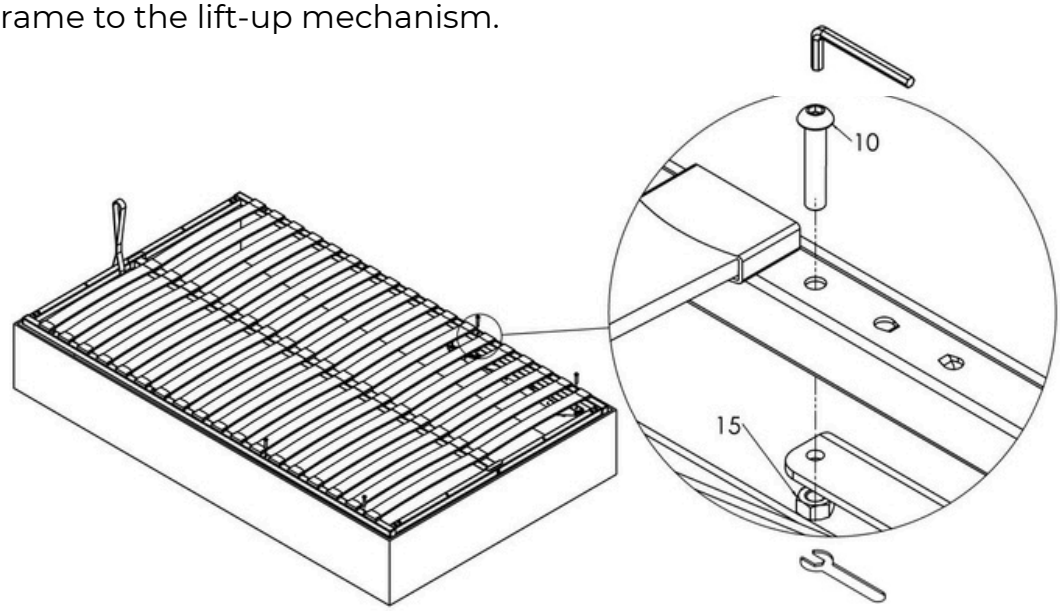


Step 14 – Attach the lower end of each gas spring
Lift the slatted frame together with the lifting mechanisms and attach the lower end of each gas spring to the lifting mechanism with the supplied nuts (13). Two people are recommended for this step.

Important: Tighten the nut securely, but do not overtighten it.

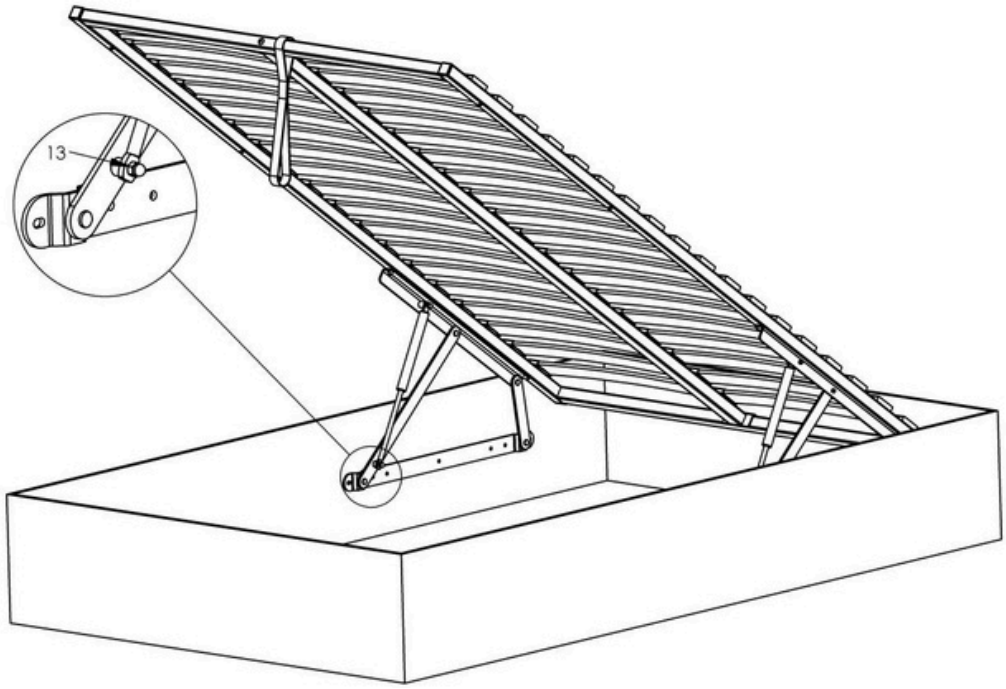

Step 15 – Install the mattress retaining bar
Install the mattress retainer (14) at the end of the slatted bed frame, on the headboard side. Hook the mattress retainer around the frame so that it is securely in place.

The mattress retainer prevents the mattress from sliding when the slatted bed frame is lifted.

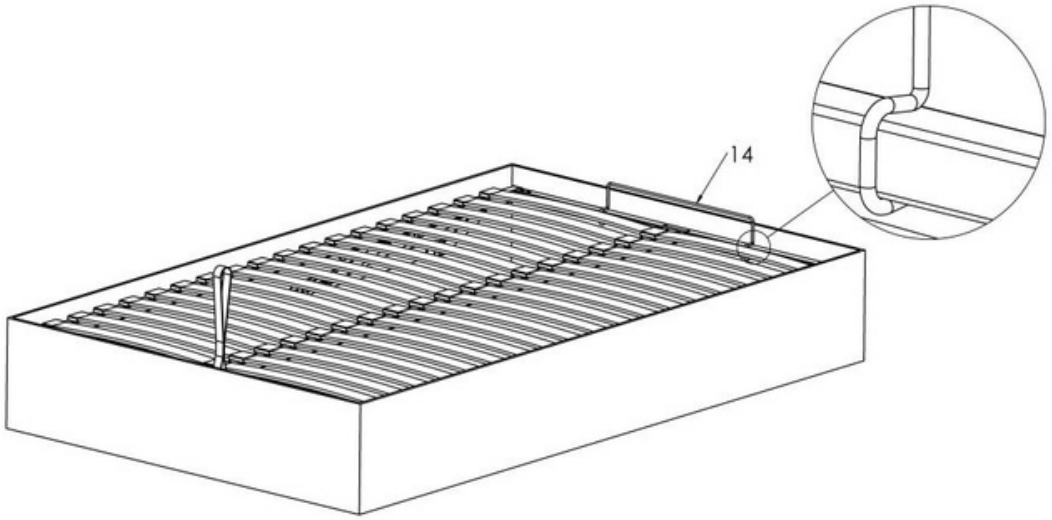

Step 16 – Final check
Place the mattress on the frame to weigh it down. Open and close the lifting frame several times.

Note: The first few times you operate the frame you'll need to use more force; thereafter, the lift assist will stabilize.

